



New Electric BBQ Guidelines

Welcome to our new electric BBQ, purchased January 2013 due to Council regulations of no gas allowed on premises. Using an electric BBQ is different from gas so please find below some guidelines.

- We have provided an extension cord for you to run through the playroom window as the PowerPoint is located near the dress up corner wall. Ensure the cord is run along the shelf not the floor.
- Do not let the cord touch the BBQ as it could melt
- The BBQ will take up to 20 mins to heat up so we encourage you to turn it on and leave hood down for 20 minutes before you place your items on it.
- **You leave the hood DOWN all the time when cooking on electric BBQ.**
- Leaving the hood up or opening it constantly will mean a longer cooking time. Leaving hood down means even cooking of your food.
- Never allow temperature to operate in red zone of dial face – turn down or off.
- When moving the grease tray you shift BBQ away from the wall as the tray slides backwards from underneath.
- **Cleaning is required after each use is required – allow 15 minutes :**
 - Remove grease tray, plate and grill and wash them in warm soapy water in the kitchen. You can use a bristle brush and detergent provided.
 - Wipe the inside of the hood and outside with a warm soap cloth.
 - Dry off with tea towel and restore all elements.
 - Never use Wire wool pads, brushes, scouring materials, bleaches or harsh chemicals
- Refer to the BBQ Manual enclosed – additional copy located in drawer in kitchen.
- The BBQ when on must never left be unattended and do not allow children around the BBQ
- Any issues email parties@Insp.com.au
- **If the BBQ is not cleaned your bond will be retained as we will need to use that to pay our cleaner to do this for you.**